



## Timer Saver Instruction Sheet

The Timer Saver enables you to display time of day on your scoreboard or pace clock without having your Sports Timer connected to the scoreboard. Once set, the Timer Saver will continue to keep time of day even when disconnected from AC power. It will only transmit data to the scoreboard when connected both to the scoreboard and to AC power.

### Setting up the Timer Saver

1. The Timer Saver sends time of day data over CTS scoreboard channels 03 and 0F. Set the scoreboard or pace clock to one of these channels:
  - a. *Single-Line Scoreboard*: set the dip switches to channel 03 or 0F. Most CTS Single-Line scoreboards are set to 0F before shipping. If you need to change the channel, set the dip switches according to the module codes label inside the scoreboard. This module code information is also available on the CTS website, under Help and Support/ Online Manuals.
  - b. *Pro Pace Clock*: Set the Scoreboard/Training switch to Scoreboard, and the Mode switch to 4 (channel 03) or 16 (channel 0F).
  - c. *Basic Pace Clock*: Set the mode switch to Water Polo Shot Clock.
2. Plug the Timer Saver into a 120 VAC wall outlet.
3. Plug one end of a standard CTS data cable into the jack labeled "Scoreboard" on the Timer Saver. Plug the other end of the data cable into one of the data cable jacks on your scoreboard or pace clock.
4. The scoreboard or pace clock will display time of day. Press the Hour Set and Minute Set buttons on the side of the Timer Saver to set the correct time.

Colorado Time Systems  
1551 E. 11<sup>th</sup> Street, Loveland, CO 80537  
Phone: 970-667-1000 x256 Fax: 970-667-1032 Toll free: 800-287-0653 ext. 256  
www.coloradotime.com E-mail: customerservice@coloradotime.com