

User Instructions

Assembly of Flat Wall FINA Touchpad Caddies

List of parts:


- 2 assembled end frames
- 1 bottom cross frame with bottom pad supports attached
- 4 long top pieces (two top cross frames and two top pad supports)
- 16 bolts (3/8" x 1", zinc plated)
- 16 spring nuts (3/8" Unistrut)
- 16 washers (3/8" flat plated)

List of tools needed:

- 9/16-inch socket or wrench

Final Assembly

Spring nut instructions:

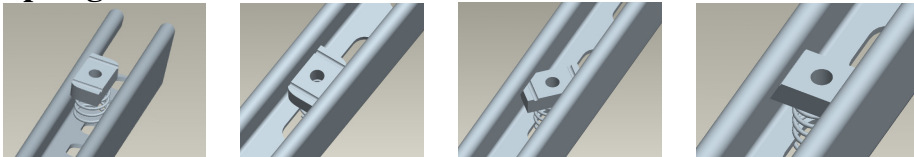

Your flat wall touchpad caddy comes partially assembled from the factory. To complete the assembly, follow these instructions:

- 1) Install the bottom cross frame.
 - a. The bottom cross frame has a flat plate attached to each end. Use this plate and 2 spring nuts, 2 bolts and 2 washers to attach the bottom cross frame to one of the end frames, as shown in *Figure 1*. (Note that the wheel base extension should be oriented towards the inside of the caddy as shown)
 - b. Repeat for the other end.



Figure 1

- 2) Install the top pad supports to the end frames at the 90-degree angle brackets that were installed on the end frame supports at the factory, using a spring nut, bolt and washer for each angle bracket, as shown.

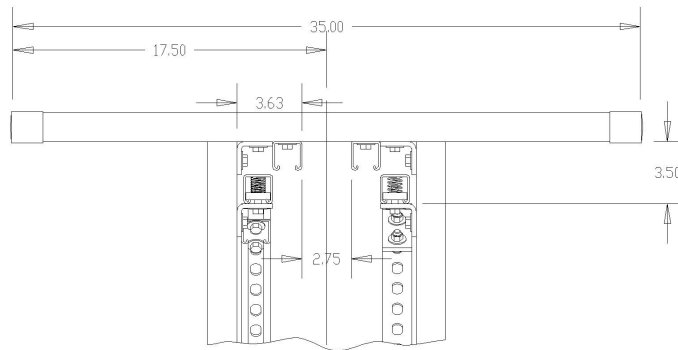


Figure 2

- 3) Install the two top cross frames to the under side of the top of the end frames, using a spring nut, bolt and washer at each end, as shown. See dimensions in *Figure 2* for proper spacing.

Colorado Time Systems
 1551 E. 11th Street, Loveland, CO 80537
 Phone: 970-667-1000 x256 Fax: 970-667-1032 Toll free: 800-287-0653 ext. 256
 www.coloradotime.com E-mail: customerservice@coloradotime.com